



DishSkinz Installation

Important:

- Handle your DishSkinz with care. Do not drop, bend or attempt to place covers on dishes of a different size.
- While installation is easily done before your satellite dish has been set up, DishSkinz can also be installed on a satellite dish that is already mounted. Use caution to not bend or alter the alignment of the satellite dish.

Installation of the DishSkinz Satellite Cover

Step 1

Place the DishSkinz cover over the satellite dish, checking for proper fit on all sides. Rotate or adjust as needed to get the best fit. (Illustration 1)

Step 2

Using the clips provided, start at the 10:00 position holding a clip with the double tab on top and the single tab on the bottom. With the clip at a 45° angle to the dish, slide one top tab and the bottom tab over the dish/cover. Swivel the clip back to a straight forward position and slide the other tab over the dish/cover. Slide the clip forward into position as far as it will go, keeping pressure on the face of the cover. (Illustration 2)

Repeat this step with each of the 3 remaining clips at the 2:00, 4:00 and 8:00 positions. (Illustration 3) Check to make sure the clips are slid forward as far as they will go while keeping pressure on the face of the cover.

Installation is now complete!

Removal of the DishSkinz Satellite Cover

Your DishSkinz cover can be easily removed or replaced. Gently insert the tip of a flathead screwdriver between the clip and the dish. Lift up and carefully slide the clip back and off the dish.

Installation of your DishSkinz will not affect your signal.

NOTE:

Use extreme caution when securing your satellite skin to a dish already mounted on a rooftop or high wall location. We recommend you have help in these types of installation situations.

Illustration 1

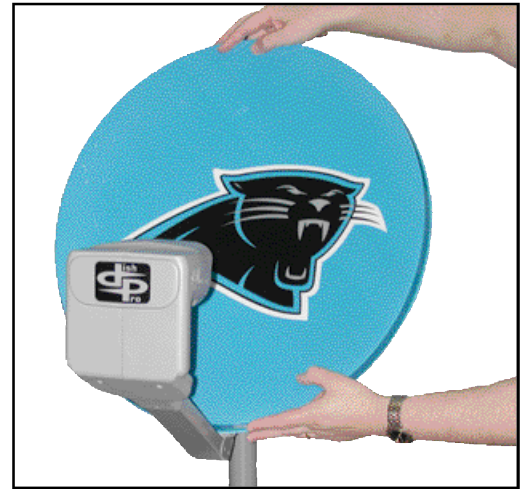


Illustration 2

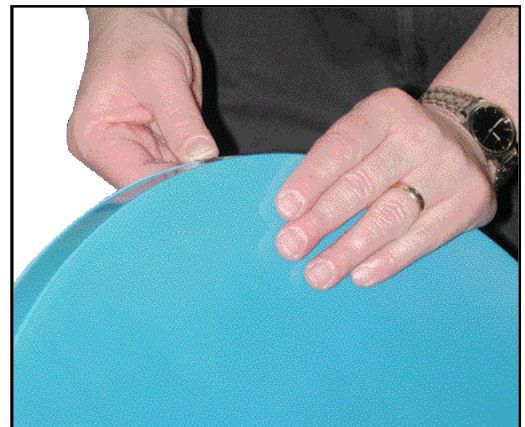


Illustration 3

